



Dome Packing Conversion Kit

Convert cone-packed stuffing boxes to Larkin Dome packing

Installation Instructions

1. Remove the upper gland
2. Pull out the four pieces of cone packing
3. Install the lower split bronze ring around polished rod with stenciled side facing down. Then install retainer ring around split bronze ring.
4. Install the Teflon insert ring on the polished rod. Next, install the dome packing carrier over the Teflon insert. Stagger the splits: place the split in the Teflon ring 180° from the split in the first carrier, then rotate each carrier split 180° from the one below it. Repeat for all three carriers and apply grease generously. Make sure the dome side faces down and the threaded eyelet faces up.
5. Install the upper split bronze ring on top of the dome packing with the stenciled side facing up. Then install the retainer ring over the split bronze ring.
6. Reinstall upper gland.

CAUTION: DO NOT OVERTIGHTEN PACKING




Top split bronze ring
w/ stencil side up

Dome packing
3 pc set

Bottom split bronze ring
w/ stencil side
down

Kit for Classic SB w/ standard LUG

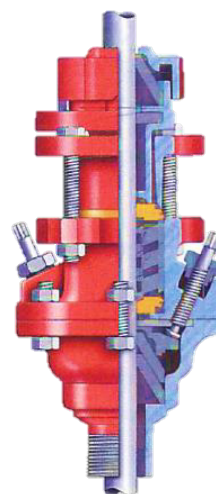

Classic SBDP

Larkin Products, LLC
PO Box 3644
Tulsa, OK 74101
918-584-3475
www.larkinproductsinc.com